
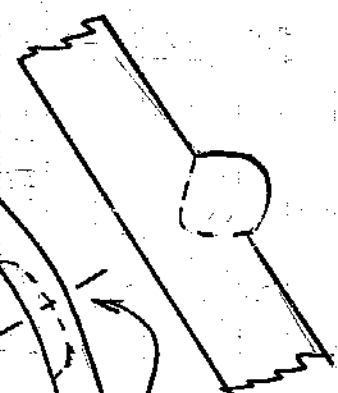



HEART TRIVET

MATERIAL: 24 INCH 1/4x1/2 HR

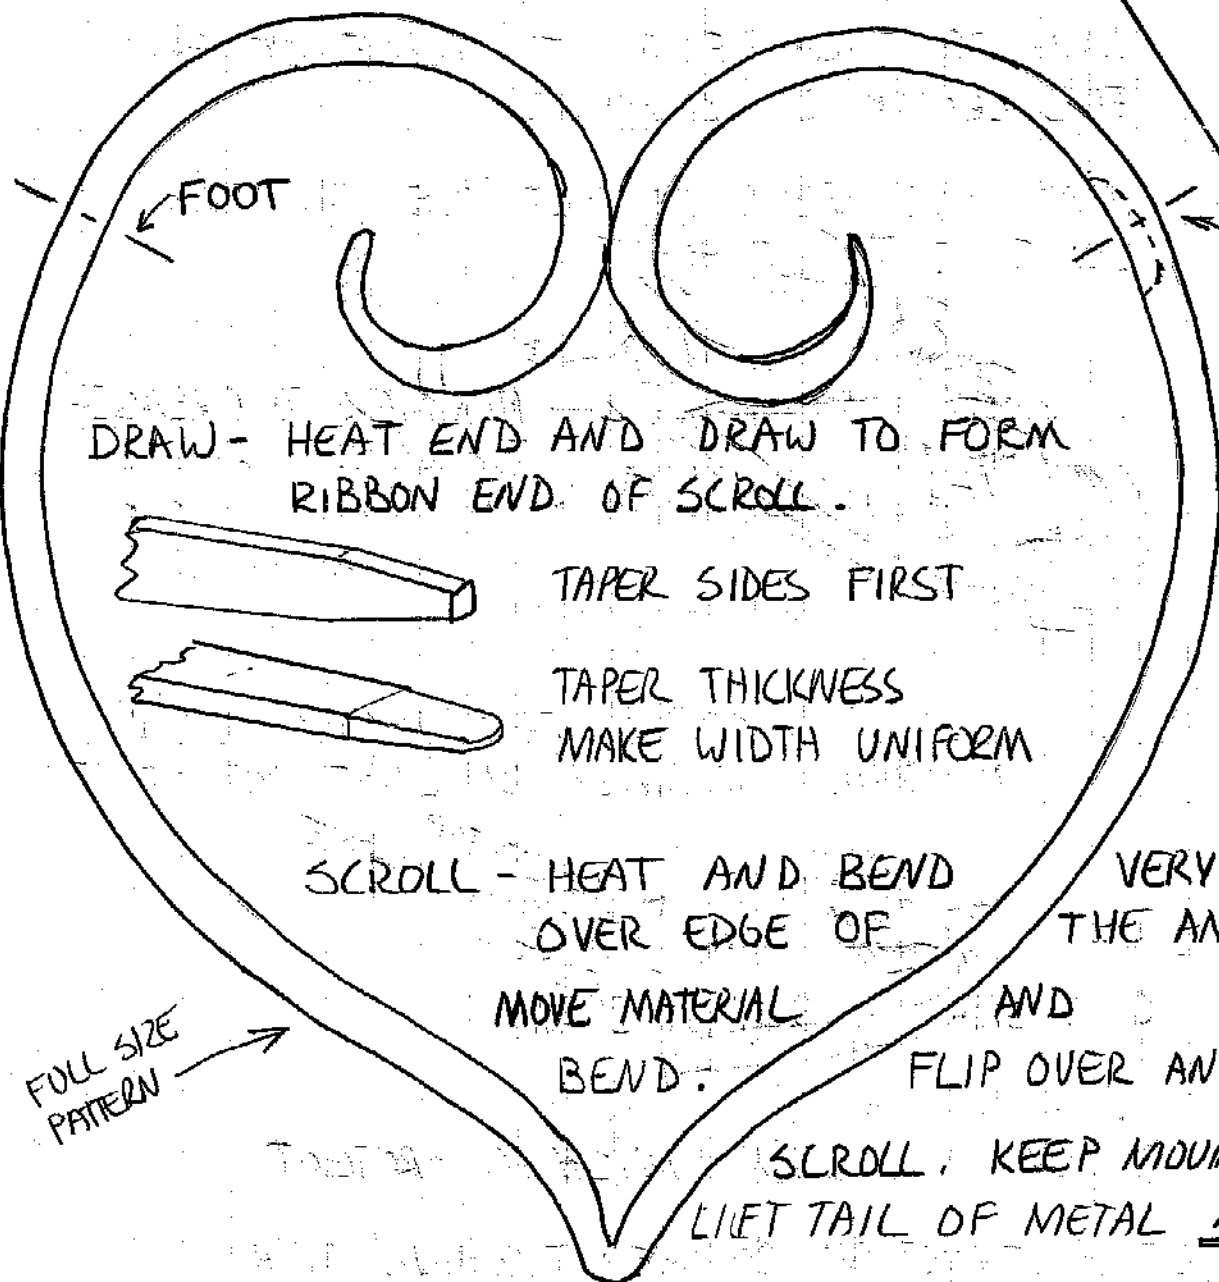


FOOT HERE
DRAW METAL
FROM INSIDE

DRAW - HEAT END AND DRAW TO FORM
RIBBON END OF SCROLL.

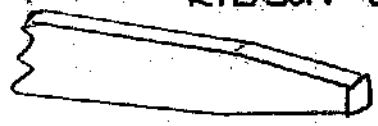

TAPER SIDES FIRST

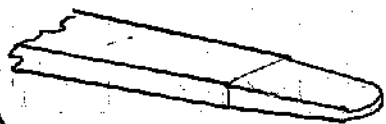

TAPER THICKNESS
MAKE WIDTH UNIFORM

SCROLL - HEAT AND BEND
OVER EDGE OF


VERY TIP
THE ANVIL

MOVE MATERIAL
BEND.

AND
FLIP OVER AND

SCROLL, KEEP MOVING


LIFT TAIL OF METAL

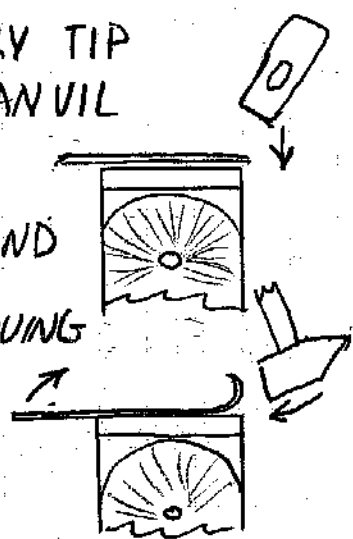

CHECK AGAINST PATTERN FOR SHAPE

FULL SIZE
PATTERN

OFFSET - HEAT AND OFFSET FOOT BY STRIKING
1/2 WIDTH ON CORNER OF ANVIL. DRAW
METAL TO PLEASING SHAPE.

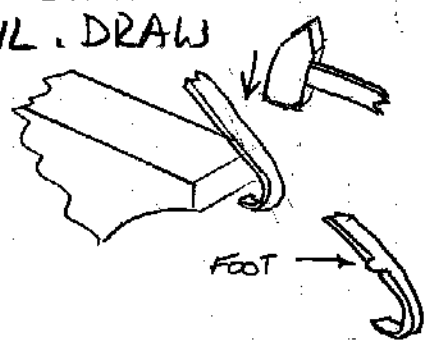

SCROLL - HEAT AND CONTINUE SCROLL


REPEAT AT OPPOSITE END




* DON'T FORGET FOOT
SHOULD BE ON SAME SIDE!

OFFSET -- HEAT AND OFFSET ON CORNER OF ANVIL TO FORM FOOT AT MIDDLE OF PART
FIND CENTER BY BALANCING

BEND - HEAT AND BEND IN POST VISE TO FORM CREASE AT TIP OF HEART

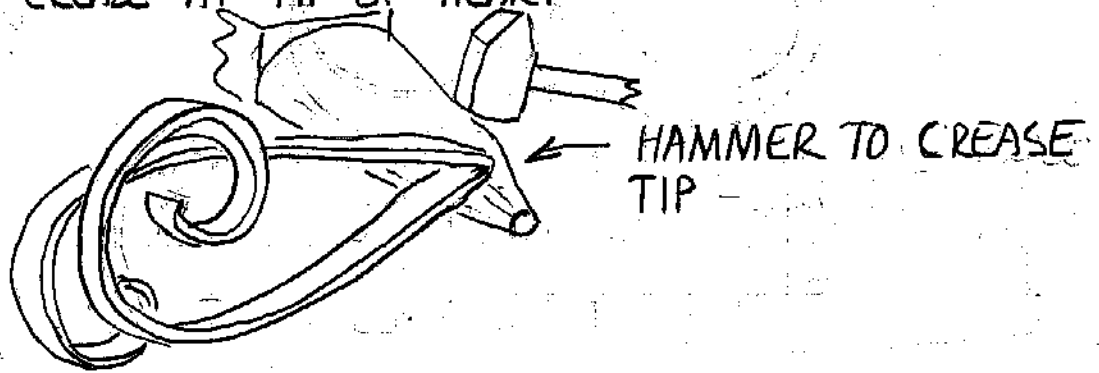

STRAIGHTEN - HEAT AND STRAIGHTEN UPSIDE DOWN ON ANVIL - HAMMER DAYLIGHT OUT OF IT!

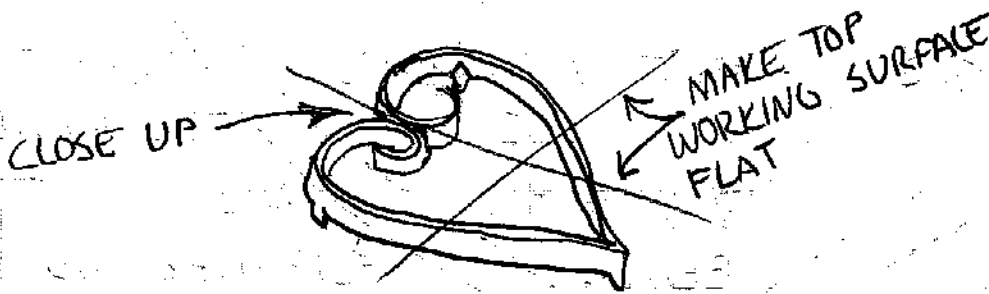

FINISH - APPLY HOT WAX FINISH TO PROTECT

NOTE: WET INSTRUCTION BEFORE TOUCHING WITH HOT METAL TO PREVENT BURNING.